DG600 装配说明书

DG600 Assembly Instructions


—:产品细节图(The detail pictures of DG600)











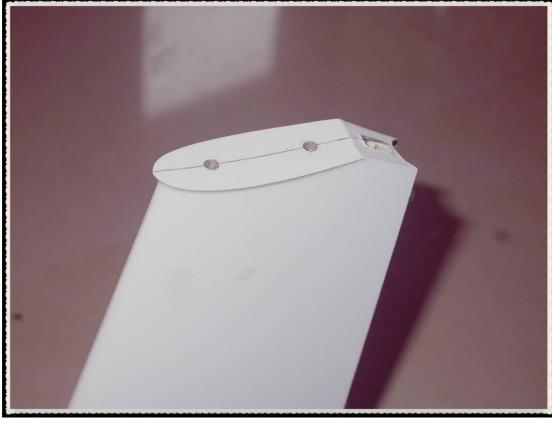

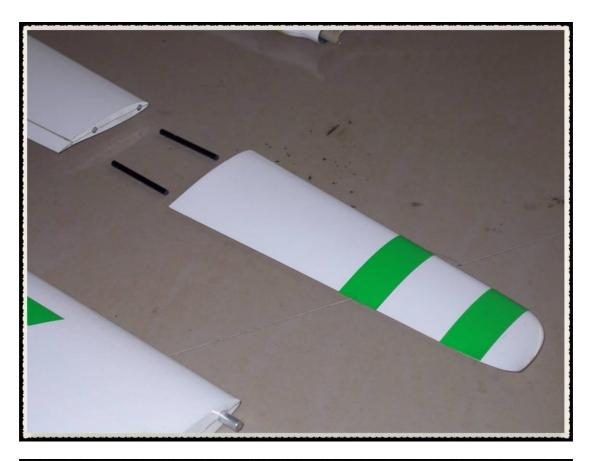



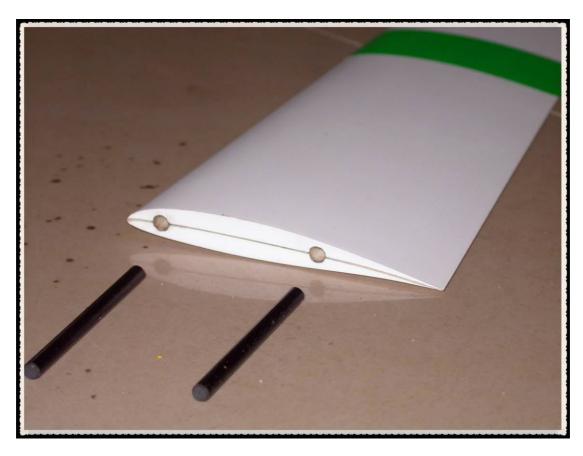




二:装配过程(Assembly process)

1:把金属推拉杆剪断,只保留螺纹部分。

First, Cut off the linkage rods, only retain the threaded portion

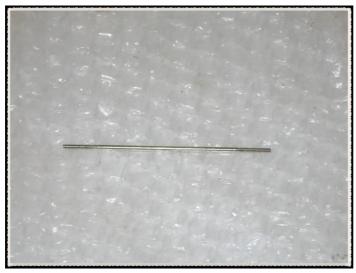







2:将螺纹部分的两侧与金属铁夹头连接好。(螺纹部分打螺丝胶 , 以避免松动。) Second, Connect well clevis with the two head of threaded portion. (Gluing the threaded portion to avoid loosening)




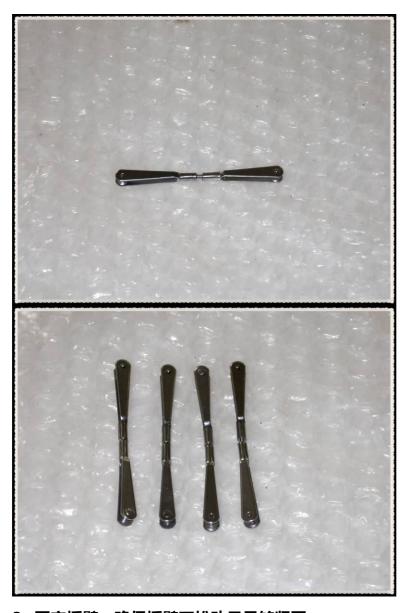


3: 固定摇臂,确保摇臂不松动且足够坚固。

Third, Fixing the control horn to make it strong enough and not loose

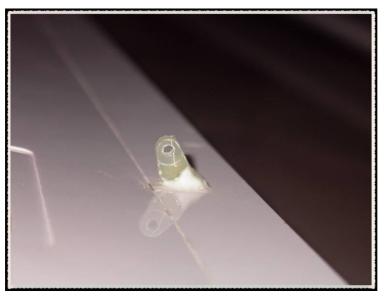


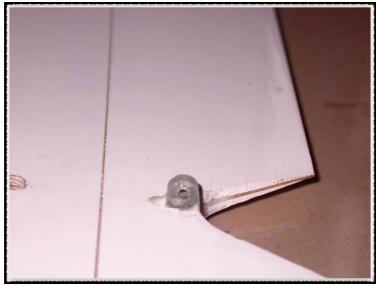

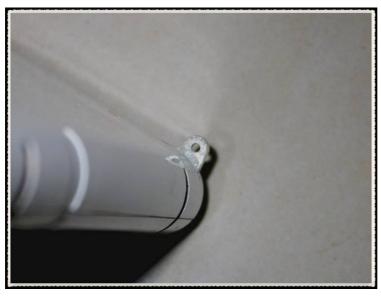

4:固定舵机座。

Fourth, To fasten the servo tray.

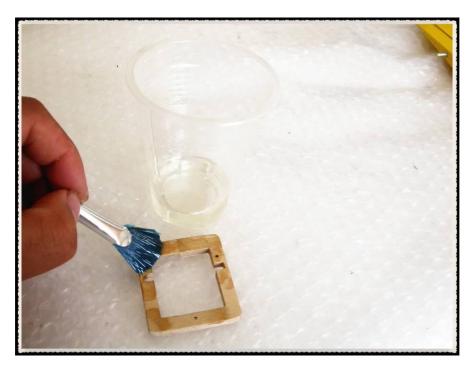





5:用铁钩把舵机延长线穿入机翼,并与舵机线连接,然后固定舵机,安装推拉杆。


Fifth, With hook take wiring harness through the wings, and connect wiring harness with servo wiring well, then fixed the servo and install linkage rods.



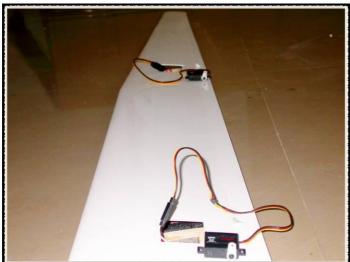

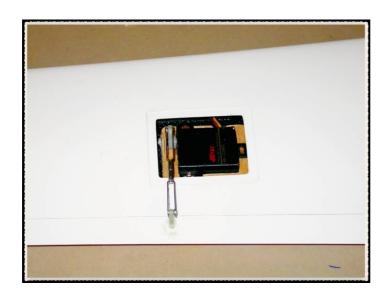

6:将舵机线接上延长线后,拆除舵机摇臂,将舵机固定在舵机安装槽内。
Sixth, Connect servo wiring with extended line, then remove the control horn and fasten the servo into the installed slot.

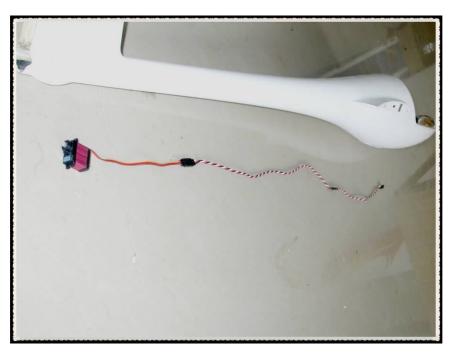



7:将推拉杆一侧的铁夹头扣上舵机摇臂后,从垂直尾翼顶部的孔中穿入,然后将舵机摇臂安装在舵机上。

Seven, connect the clevis of one side of push rod to the control horn of servo, then make it cross the hole of the fin, then install it to the servo.











8:将金属铁夹头扣在升降舵摇臂上,然后用螺丝固定水平尾翼。

Eighth, Connect the clevis to the control horn of elevator, then use the screw to fasten the tailplane.

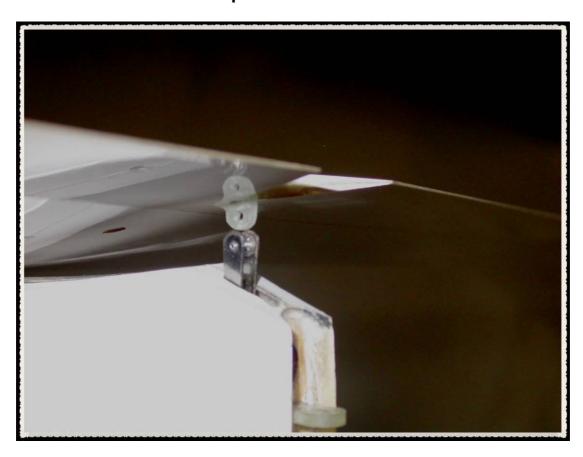

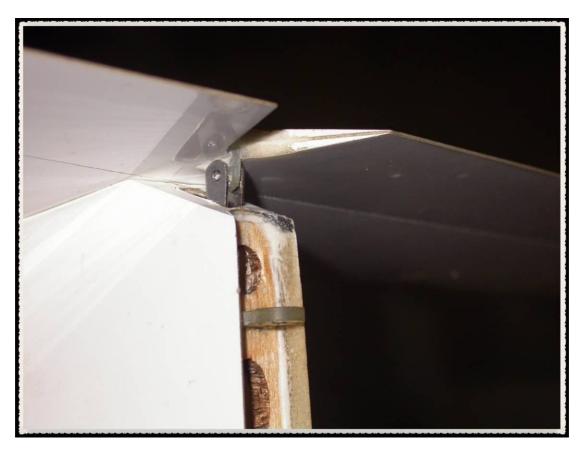






9:固定机舱架,安装方向舵舵机,并连接推拉杆。

Nine, Fasten the cabin plate and install the rudder servo, then connect the push rod.



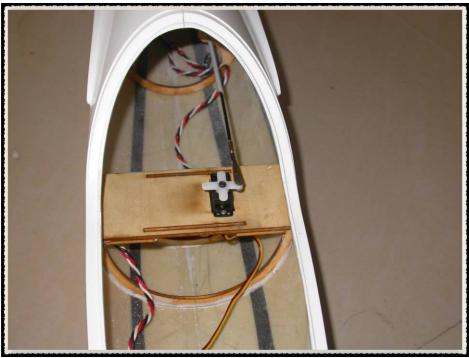



10:将方向舵推拉杆铁夹头扣在方向舵摇臂上。

Ten, Fasten the clevis of rudder push rod to the rudder control horn.






11:将炭杆从方向舵顶端的孔中穿到底,并固定炭杆。

Eleven, Make carbon rod cross from top to bottom and fasten the carbon rod.



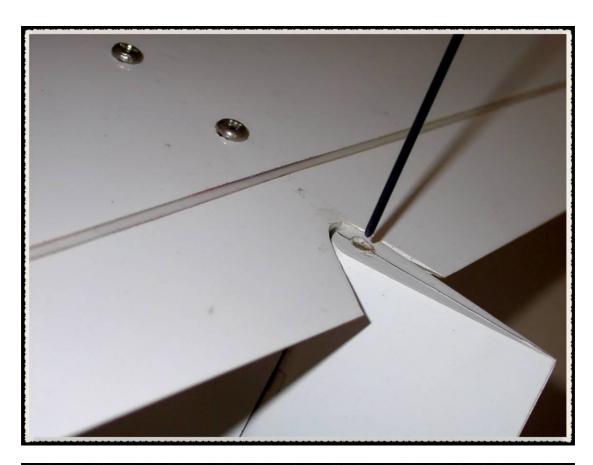




12:固定电机座,并安装电机和整流罩。

Twelve, Fasten the motor tray, then install motor and cowling.



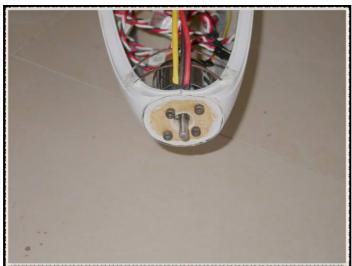



13:将各部分组合,完成安装。

Thirteen, Assemble all the parts, and complete installation.

